


Electric wiring diagram 1968 - 280SL  
(USA Standard version)

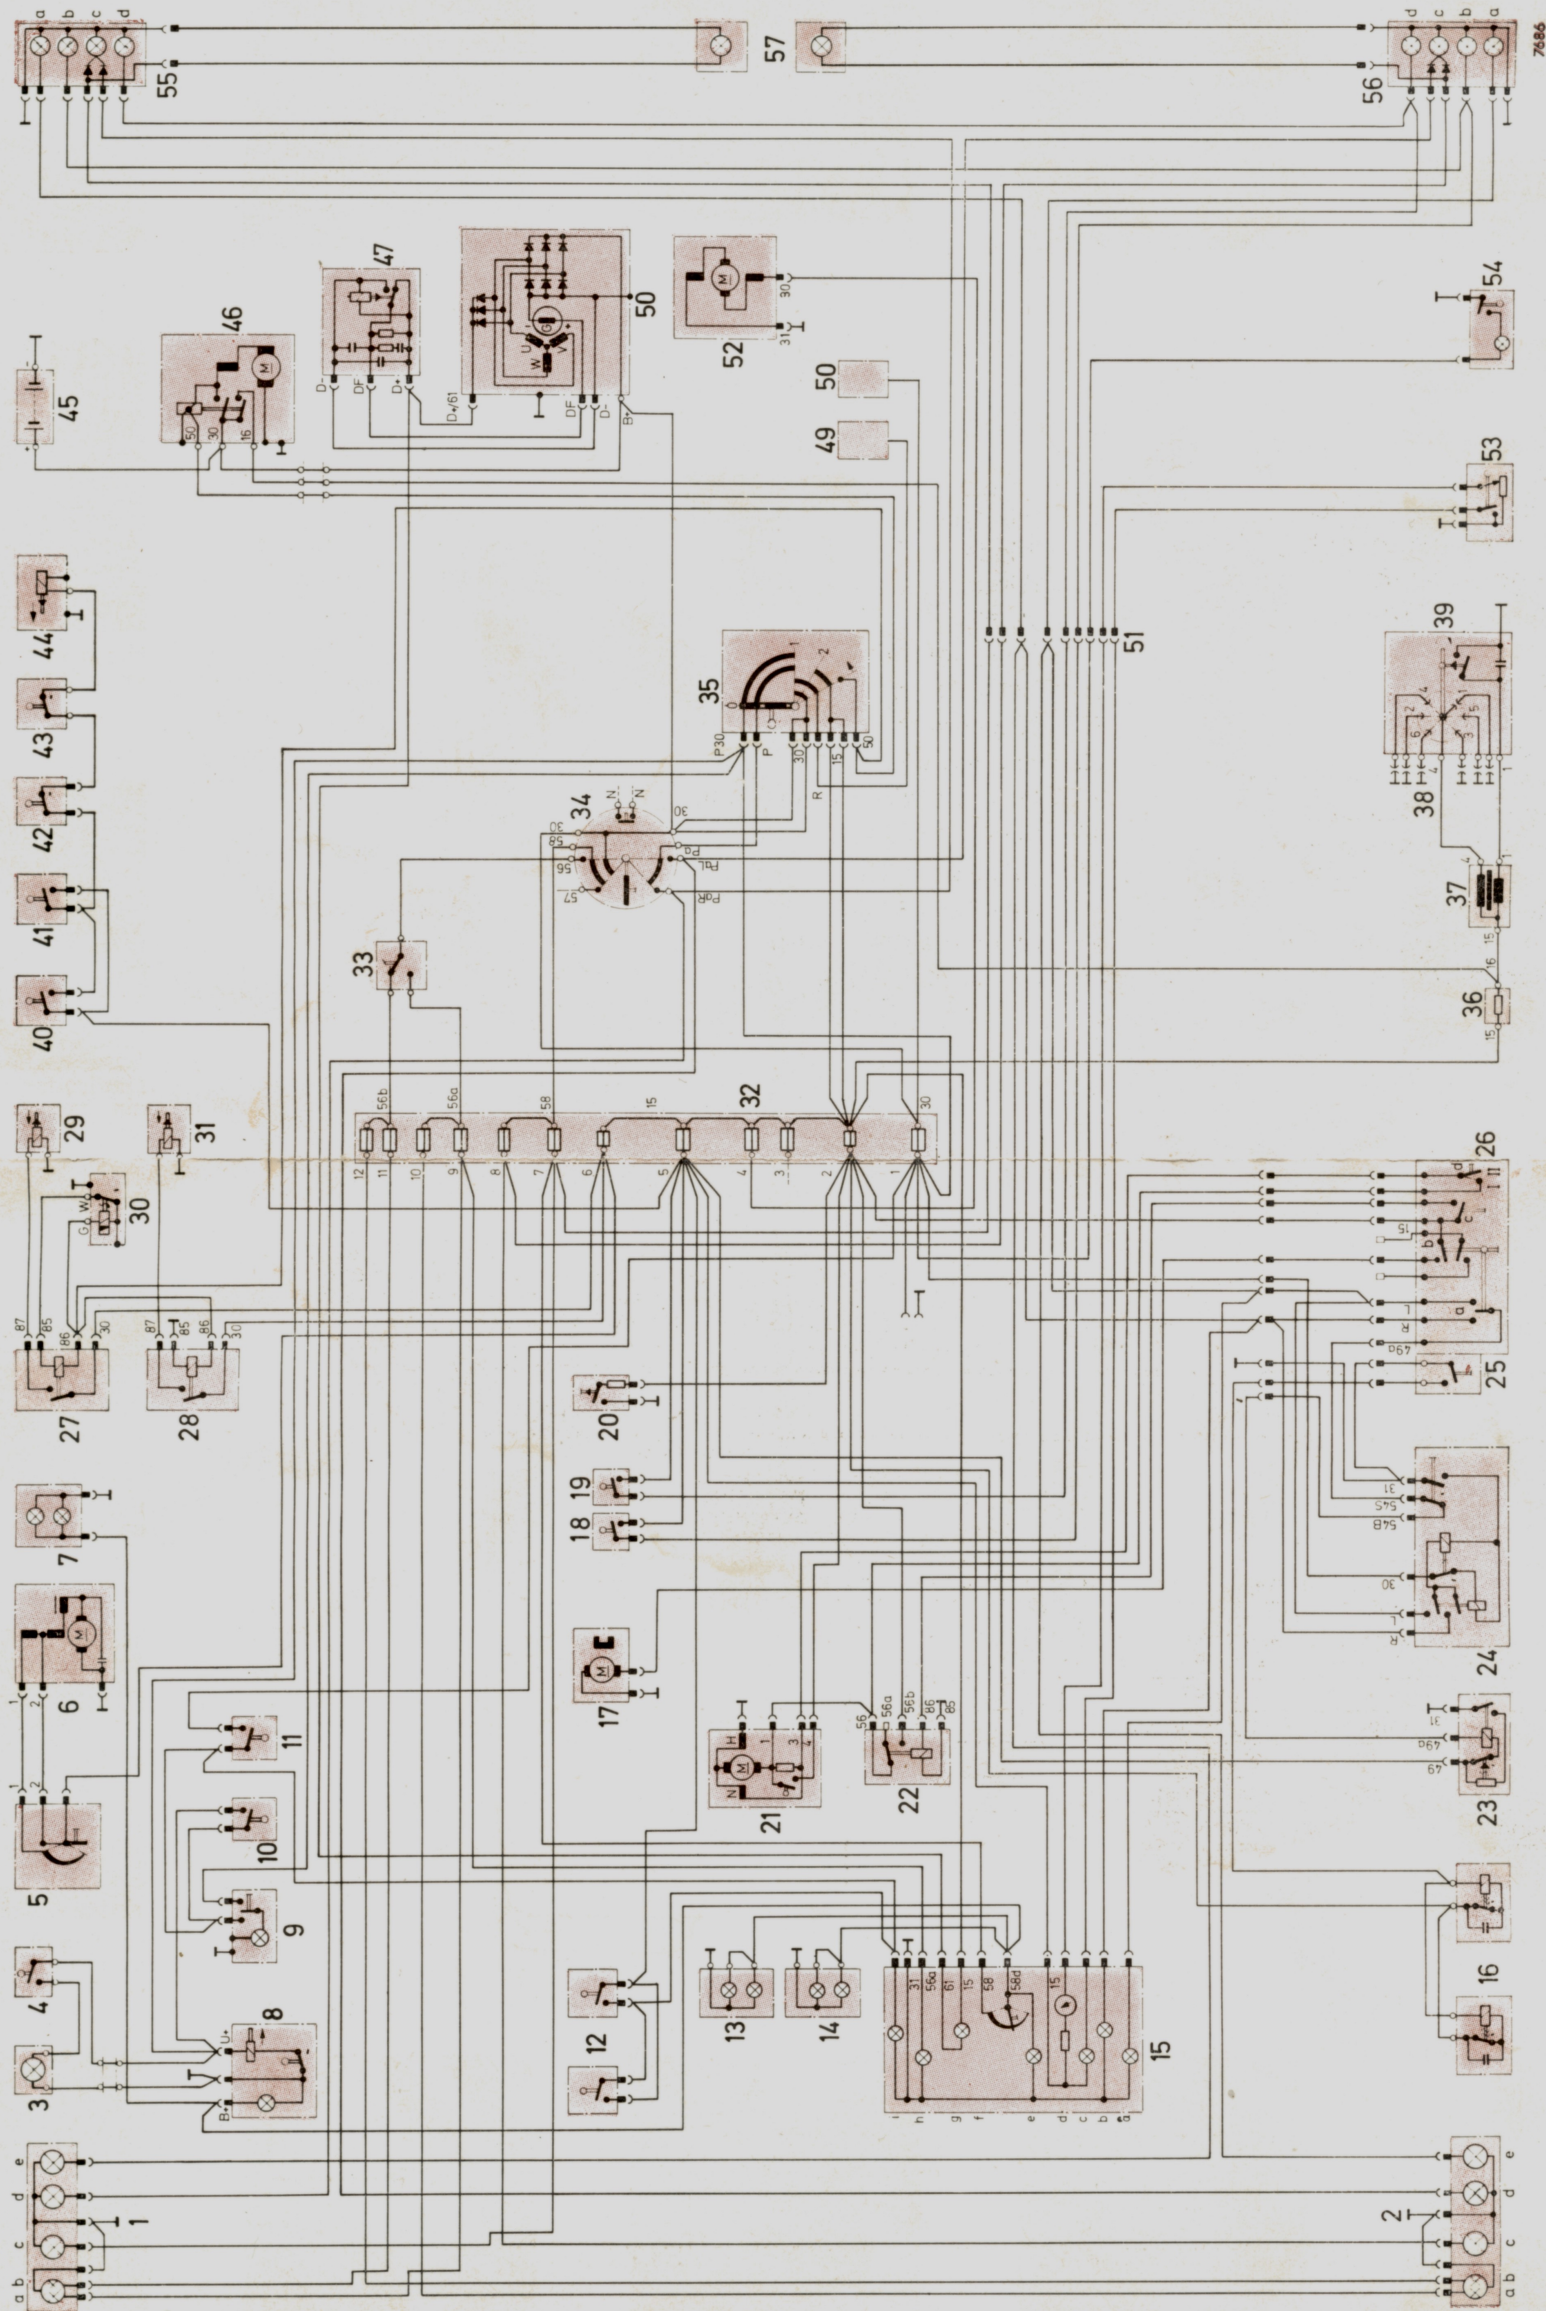

**Explanations to electric wiring diagram 280SL USA Standard Version 1968**

1	Light assembly (right side)	h	High beam indicator	37	Ignition coil
2	Light assembly (left side)	i	Brake fluid level control light	38	Spark plugs
a	High beam	16	Dual tone horns	39	Distributor
b	Low beam	17	Windshield washer pump	40	Switch, gear-shift position
c	Parking light	18	Back-up light switch		(in 3rd gear closed)
d	Side light	19	Stop light switch	41	Switch, gear-shift position
e	Turn signal light	20	Cigar lighter		(in 4th gear closed)
3	Glove compartment and reading light	21	Windshield wiper motor	42	Switch, clutch pedal
4	Switch for glove compartment light	22	Relay for wiper motor	43	Switch, accelerator pedal shaft
5	Heater blower switch	23	Sending unit for turn signal light	44	Solenoid, injection pump
6	Heater blower motor	24	Hazard warning light transmitter	45	Battery
7	Lighting, heating control	25	Horn ring	46	Starter
8	Electric clock	26	Combination switch	47	Voltage regulator
9	Entrance light and switch	a	Turn signal light switch	48	Alternator
10	Door contact switch, right	b	Windshield washer switch	49	Radio (optional)
11	Door contact switch, left	c	Windshield wiper switch	50	Automatic antenna (optional)
12	Brake fluid level warning light control element	d	Windshield wiper speed control switch	51	Rear light unit wiring harness connecting plug
13	Speedometer light	27	Relay for starter valve	52	Fuel feed pump
14	Revolution counter light	28	Relay for mixture control	53	Fuel gauge sending unit
15	Instrument cluster	29	Magneto for starter valve	54	Trunk light
a	Turn signal light indicator, left	30	Thermo time switch	55	Rear light unit (right side)
b	Turn signal light indicator, right	31	Magneto for mixture control	56	Rear light unit (left side)
c	Low fuel level warning light	32	Fuses	a	Turn signal light
d	Fuel gauge	33	Dimmer switch	b	Back-up light
e	Instrument lighting	34	Headlight switch	c	Tail light and side light
f	Instrument lighting rheostat	35	Ignition starter switch	d	Stop light
g	Alternator charge control light	36	Series resistance	57	License plate light

for  
exhaust  
emission  
control  
system