


Electric wiring diagram

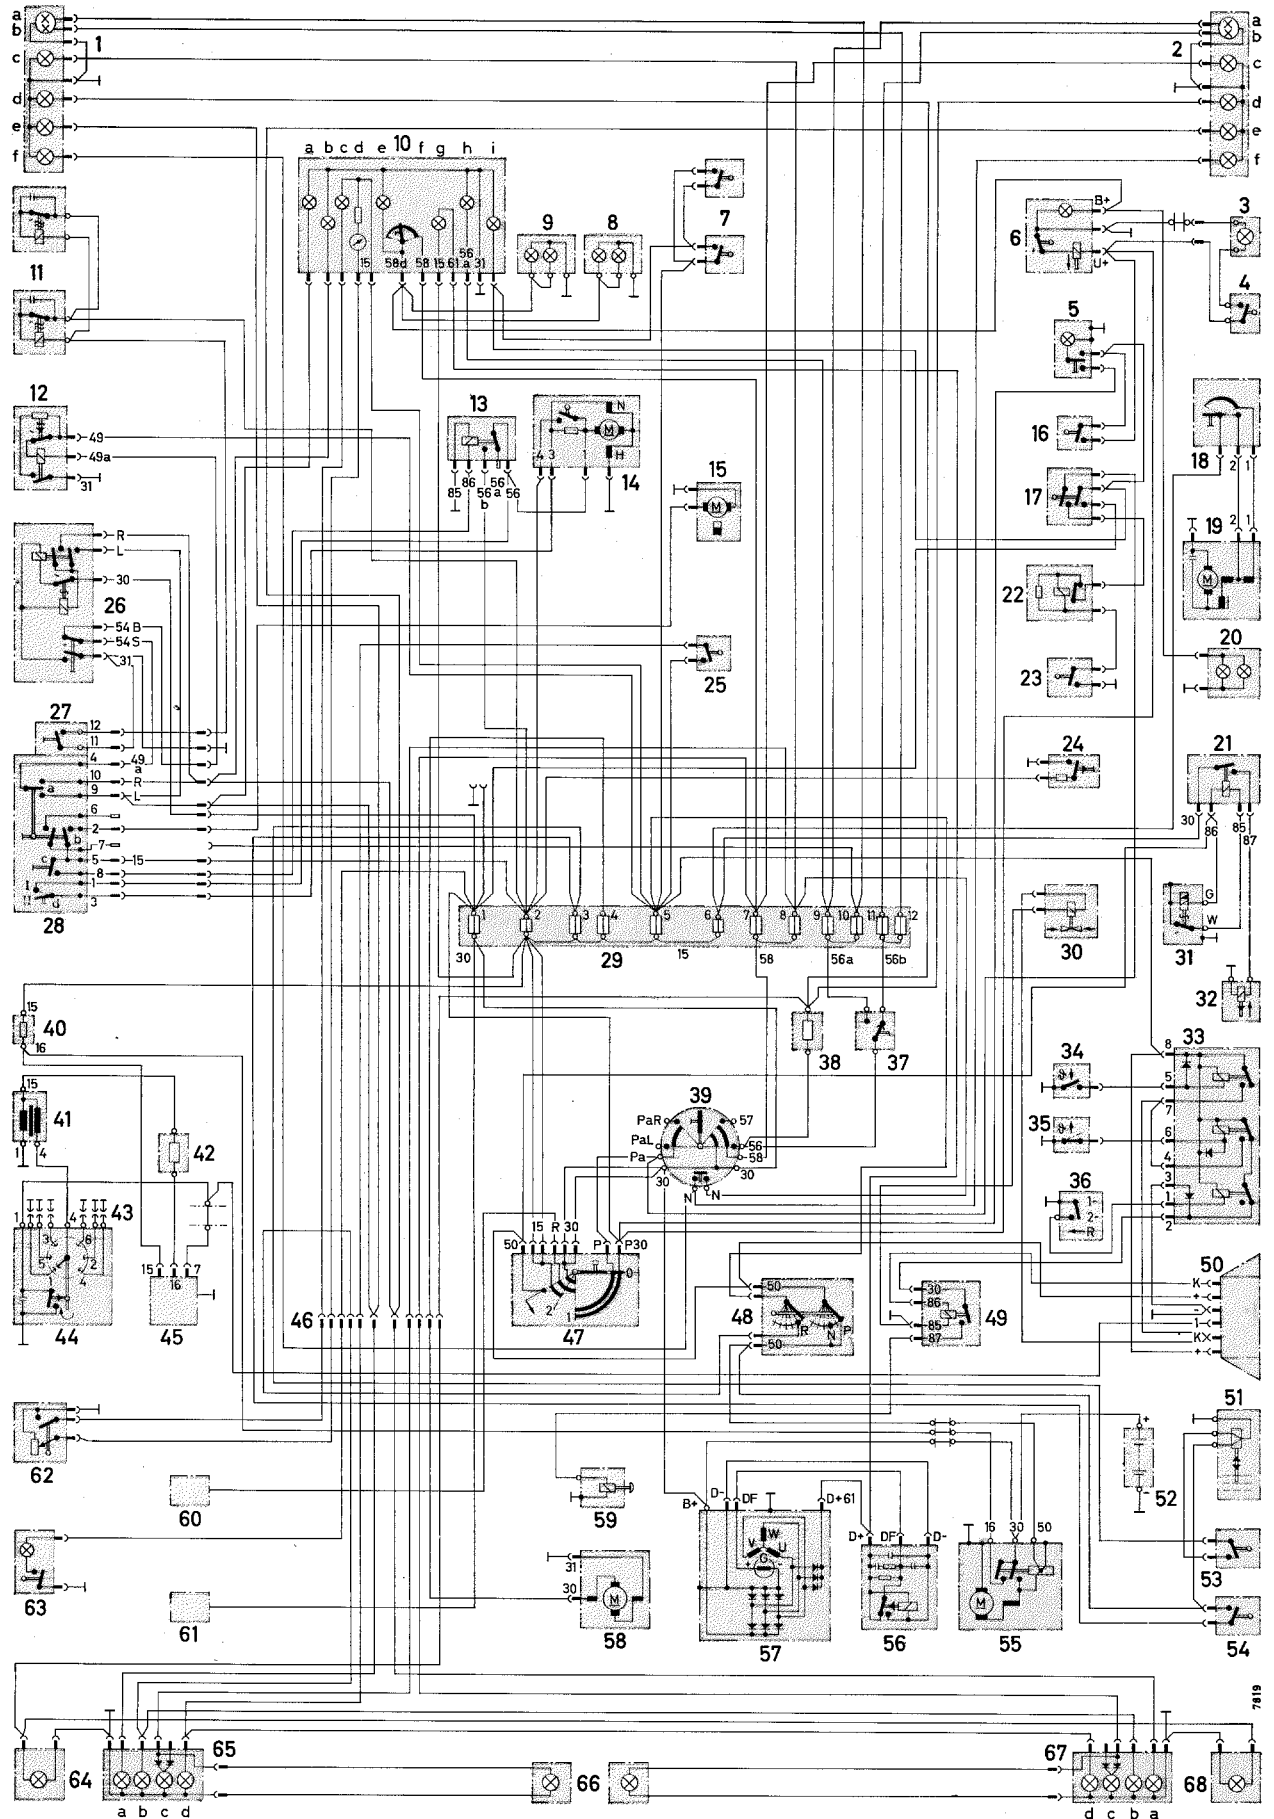

Explanations to electric wiring diagram

- | | | | | | |
|----|---|----|---|----|---|
| 1 | Light assembly (left side) | 18 | Heater blower switch | 46 | Plug connection for rear light wiring harness |
| 2 | Light assembly (right side) | 19 | Heater blower motor | 47 | Ignition starter switch |
| a | High beam | 20 | Lighting of heater control levers | 48 | Starting lock and back-up light switch |
| b | Low beam | 21 | Relay for starter valve | 49 | Contact breaker relay |
| c | Parking light | 22 | Warning buzzer | 50 | R. P. M. switch |
| d | Side marker lights | 23 | Theft protection warning buzzer switch on steering lock | 51 | Idle increase solenoid |
| e | Turn signal light | 24 | Cigar lighter | 52 | Battery |
| f | Fog light | 25 | Stop light switch | 53 | Kick-down switch |
| 3 | Glove compartment and reading light | 26 | Hazard warning light transmitter | 54 | Venturi control unit switch |
| 4 | Switch for glove compartment light | 27 | Horn ring | 55 | Starter |
| 5 | Entrance light and switch | 28 | Combination switch | 56 | Voltage regulator |
| 6 | Electric clock | a | Turn signal light switch | 57 | Alternator |
| 7 | Brake fluid level warning light control element | b | Windshield washer switch | 58 | Fuel feed pump |
| 8 | Speedometer light | c | Windshield wiper switch | 59 | Shut-off solenoid |
| 9 | Revolution counter light | d | Windshield wiper speed control switch | 60 | Radio (optional) |
| 10 | Instrument cluster | 29 | Fuses | 61 | Antenna (optional) |
| a | Turn signal light indicator, left | 30 | Two-way valve | 62 | Fuel gauge sending unit |
| b | Turn signal light indicator, right | 31 | Thermotime switch | 63 | Trunk light |
| c | Low fuel level warning light | 32 | Magneto for starter valve | 64 | Side marker lights (left side) |
| d | Fuel gauge | 33 | Relay box | 65 | Rear light unit (left side) |
| e | Instrument lighting | 34 | Thermo switch 100 ° C | a | Turn signal light |
| f | Instrument lighting rheostat | 35 | Thermo switch 17 ° C | b | Back-up light |
| g | Alternator charge control light | 36 | Hydraulic switch | c | Tail light and side light |
| h | High beam indicator | 37 | Dimmer switch | d | Stop light |
| i | Brake fluid level control light | 38 | Fuse box for side marker lights | 66 | License plate light |
| 11 | Dual tone horns | 39 | Headlight switch | 67 | Rear light unit (right side) |
| 12 | Sending unit for turn signal light | 40 | Series resistance 0,4 Ω | a | Turn signal light |
| 13 | Relay for wiper motor | 41 | Ignition coil | b | Back-up light |
| 14 | Windshield wiper motor | 42 | Series resistance 0,6 Ω | c | Tail light and side light |
| 15 | Windshield washer pump | 43 | Spark plugs | d | Stop light |
| 16 | Door contact switch, right | 44 | Distributor | 68 | Side marker lights (right side) |
| 17 | Door contact switch, left | 45 | Switched unit for transistorized ignition | | |